


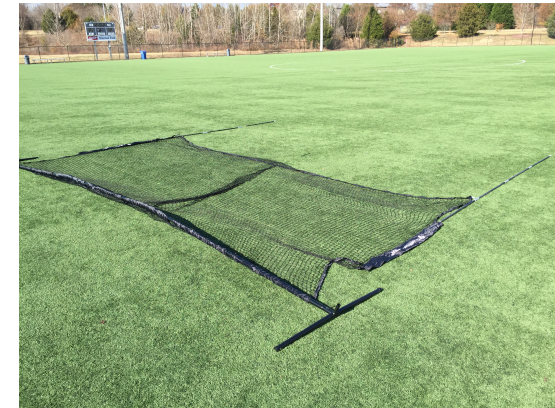

CrankShooter's 21' x 11' Pop-Up Backstop™


Assembly Instructions:

1. Assemble Parts 1, 2, and 3
2. Slide assembled parts through base sleeve of net
3. Connect Part # 4 to each end
4. Insert end poles through net sleeve at each end and insert into part #4.
5. Lay out the net on the ground, slide the fiberglass poles through the sleeves. Connect the top of the pole to the white loop on the top of each end of the net. Then raise the fiberglass poles up and slide into the base. There should be tension on the poles as you insert the poles into the base.
6. Place U shaped ground pegs at each end base leg to secure. (sand bags can also be used, not included)

*** Assembly time about 7 minutes the first time.

Flexible end pole, 4 pieces.

Flexible end pole, 4 pieces.

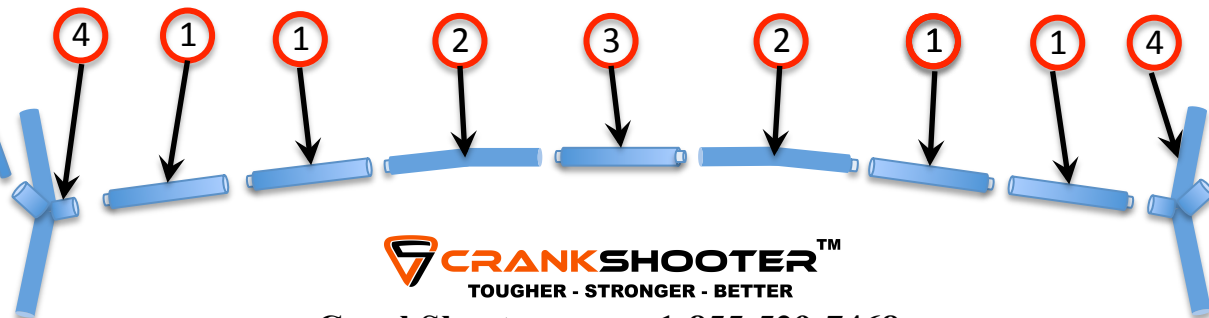

CRANKSHOOTER™
TOUGHER - STRONGER - BETTER

CrankShooter.com - 1-855-529-7468