

INVENTORY

PARTS, HARDWARE & TOOLS

PART #	QTY	COLOR	DESCRIPTION
Part #1	8	Black	End base segment
Part #2	2	Orange	Middle base segment (ends only)
Part #3	2	Red	Middle base segment (middle vertical poles only)
Part #4	4	Purple	Base vertical poles with brace holes
Part #5	4	Yellow	Middle vertical pole segments
Part #6	4	Green	Top vertical pole segments
Part #7	2	Pink	End base poles, outside segments
Part #8	4	Lt. Green	Middle base pole segment, outside segments
Part #9	2	Gray	End base poles middle segment
Part #10	1	Blue	Middle base pole, middle segment
Part #11	4	Cyan	Top segment diagonal brace
Part #12	4	Tan	Bottom segment diagonal brace
10×30 Net	1	—	Netting (10 ft × 30 ft)

HARDWARE / TOOL	QTY	APPLICATION
Long Screws (M6 × 42mm) w/ nut & washer	4	Connects diagonal brace to vertical pole at top
Short Screws (M6 × 35mm) w/ nut & washer	4	Connect diagonal brace to base pole at bottom
Very Short Screws (M6 × 15mm)	2	For the 2 flex joints @ middle base poles
Allen wrench · Regular wrench	1 · 1	Tools (included)
Bungees	12	Secure bottom of net to base poles

01


PARTS MAP & COLOR KEY

COLOR BUBBLES CORRESPOND WITH COLORED PIECES ON DIAGRAM

03

FIG. 03 · POLE & BRACE ASSEMBLY

ISOMETRIC

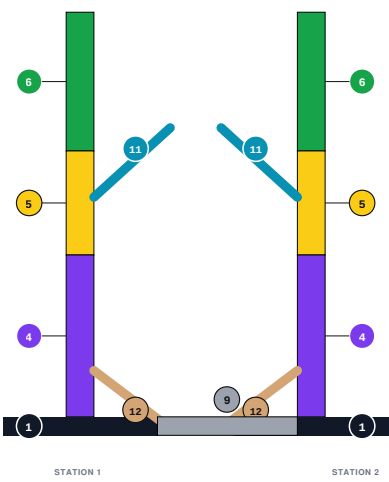

POSITION	PART	DESCRIPTION
Top	#6	Top vertical pole segment
Middle	#5	Middle vertical pole segment
Base	#4	Base vertical pole (brace holes)
Top brace	#11	Long screw M6 × 42 mm
Btm brace	#12	Short screw M6 × 35 mm
Base ctr	#9	End base middle segment

HOW TO READ

Each colored bubble = a part number in Section 01. Match bubble color & number to the physical part, then install in the position shown.

ASSEMBLING THE BASE


PARTS NEEDED: 1, 2, 3, 7, 8, 9, 10

02

- Assemble the base according to the diagram: parts 1, 2, 3, 7, 8, 9, 10 will be needed.
- Use the allen wrench and screws to secure **Diagonal Supports** and **adjustable joints**.
- After base feet are assembled, connect the bases together using the connector pipes: parts 7, 8, 9, 10 as shown in diagram.

FIG. 02 · BASE LAYOUT

TOP-DOWN

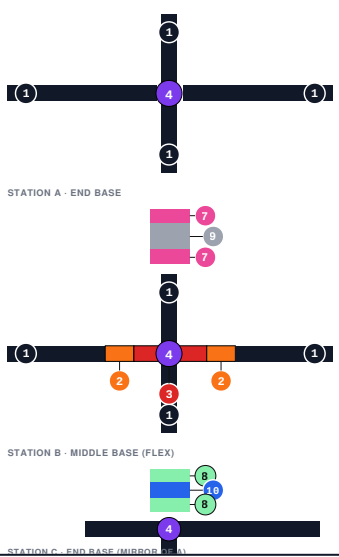

*** FLEX JOINT NOTE

Flexible joints can be adjusted at any angle after completion. Make **SURE** rubber grommet is between flexible joints.

ASSEMBLING THE POST & NET

STAND THE BACKSTOP & THREAD THE NET

04

- Next to the newly assembled base, stretch out the net on the ground beside the base.
- Assemble the vertical poles next, parts 4, 5, 6.
- Next lay the poles on the ground and line them up at each end of the net and at the 10ft and 20ft markers on the net.
- Thread all 4 poles in-and-out through the net. Once all poles are threaded through the net and attached at the top with the pole caps, stand the poles up one at a time and insert the poles into their respective bases.
- Connect diagonal braces #11 & 12 together and attach them to the vertical poles as shown.
- There is a hole in the middle section of the base poles, insert the remaining short screw, washer and nut to secure the poles together.
- Bungees are provided to secure the bottom of the net to the base poles.

Fig. 04a · Net Threading STEPS 1-4


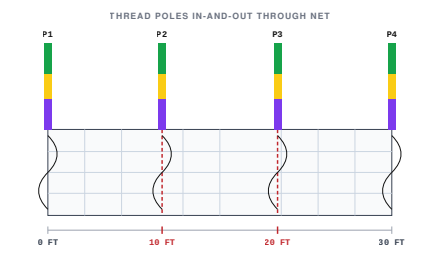


Fig. 04b · Assembled Backstop STEPS 5-7

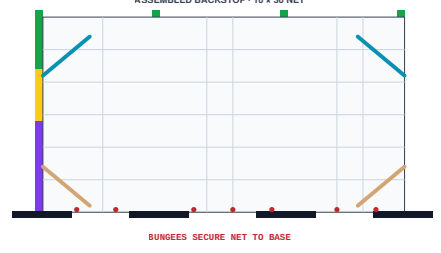

*** SAND BAGS — can be placed on the feet to secure the system during windy conditions. (not Included).