



DIA. 1A
INSERT BOLT



DIA. 1B
BOLT THROUGH HOLES



DIA. 2
ATTACH NET W/ BUNGEEES



DIA. 3
SPACE BUNGEEES EVENLY

PREPARATION FOR ASSEMBLY


- 2 adults recommended for assembly.
- Unpack all parts, layout pieces and confirm all tools and parts shown in the directions.
- If missing any parts, tools or hardware, call Crankshooter Customer Service: **1.855.529.7468**.

INVENTORY PARTS

- a. 2 Threaded bolts 2 3/8" (60mm)
- b. 2 Threaded bolts 2" (50mm)
- c. 4 Washer nuts
- d. 8 Washers
- e. 26 Ball bungees (in poly bag)
- f. 1 Allen wrench
- g. 1 Bolt wrench
- h. 13 Pipes — A Top, A Base (gripped rollers), B, C, D, E, F, G, I, J, K & L (cross bar)
- Net

ASSEMBLY STEPS

- 1 Assemble parts D and E to L (middle cross bar). D bar is on your right, E bar on your left.
- 2 Attach A Base (with rubber gripped feet) to E and D.
- 3 Attach C to D.
- 4 Attach B to E.
- 5 Attach Top bar A to C and B.
- 6 Attach G and F to the bottom near H bar.
- 7 Attach I to L and secure with 2" bolt, washer and nut. (dia. 1a & 1b)
- 8 Attach J and K pieces to F and G. (J and K are interchangeable.)
- 9 Use 2 3/8" bolts, washers and nuts to attach J to B and K to C. (dia. 1a & 1b)
- 10 Attach I to H using 2" bolt. (dia. 1a & 1b)
- 11 Attach Top A bar to the top of B and the top of C.
- 12 Use supplied screws/washers/nuts to attach J & K pipes, and to attach top and bottom of I.
- 13 Attach net to frame using ball bungees. (dia. 2 & 3)
Tip: Attach opposite corners first; once all 4 corners are attached, finish sides.
- 14 Use 5 bungees on vertical sides and 4–5 bungees on horizontal sides.
- 15 Space all bungees evenly. Keep remaining bungees as spares.

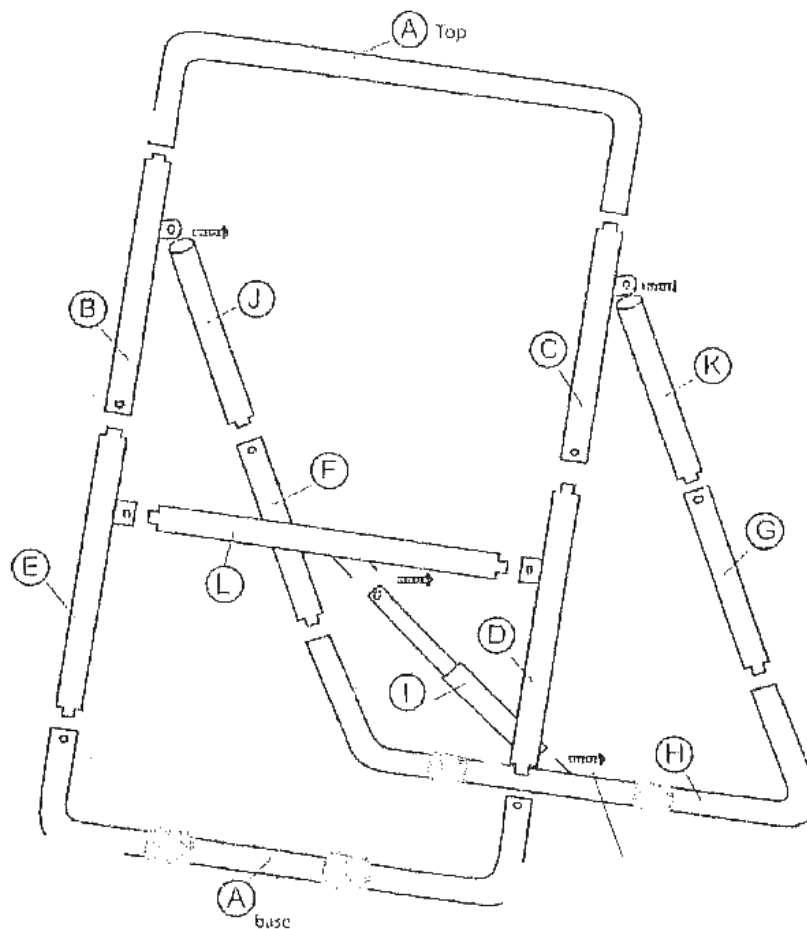

Reference diagram — locate each labeled part (A–L) as you follow the steps above